


TAPPING LINED CONCRETE OR CLAY PIPE RECOMMENDED METHOD

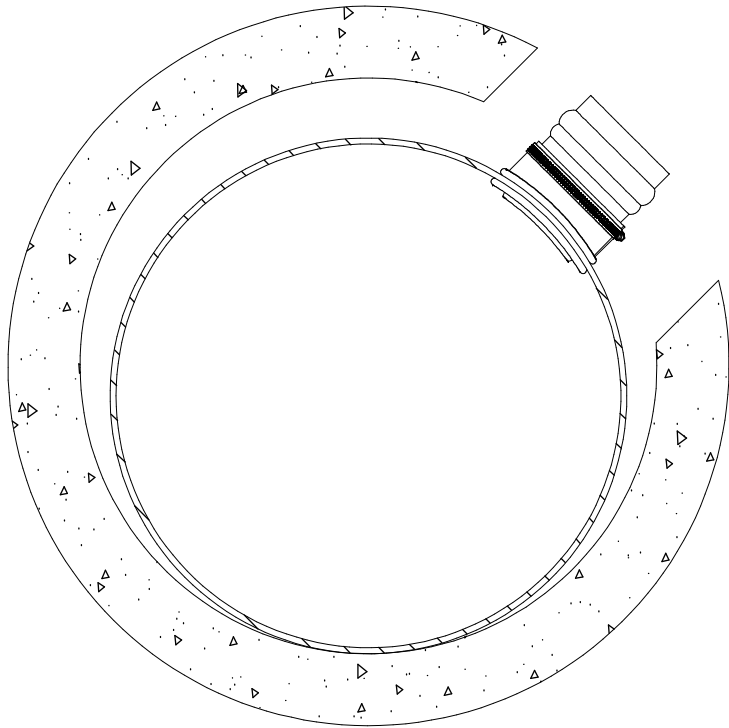

SECTION A-A
SCALE 1 / 8



DETAIL B
SCALE 1/4

RECOMMENDED INSTALLATION INSTRUCTIONS:

- MARK AREA TO BE TAPPED ON SURFACE OF PIPE
- WORKING AREA SHOULD BE 2" WIDER THAN DIAMETER OF INSERTA TEE
- BREAK CONCRETE OR CLAY USING CHISEL
- CORE HOLE THROUGH LINER AND INSTALL INSERTA TEE INTO LINER

DRAWN Daniel Fink		TITLE	
CHECKED Emery Roberts		INSERTA TEE	
	SIZE	DWG NO	REV
AIR TESTABLE Yes	SCALE	7/22/2008	SHEET 1 OF 1