
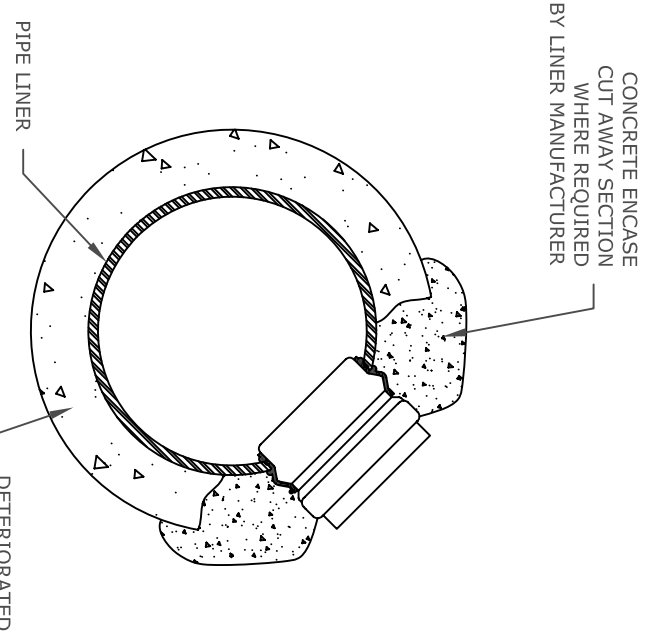
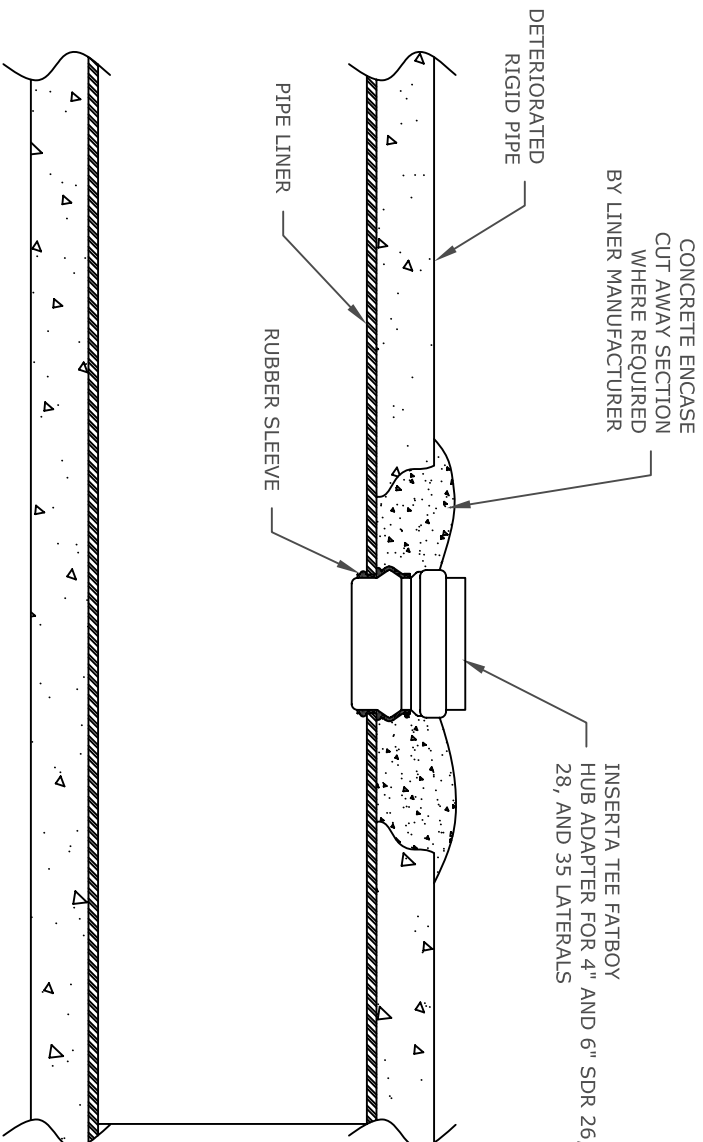


INSTALLATION DETAIL FOR TAPPING LINED RIGID PIPE USING INSERTA TEE FATBOY®



- INSTALLATION INSTRUCTIONS:
1. MARK AREA TO BE TAPPED ON SURFACE OF RIGID PIPE. WORKING AREA SHOULD BE 2-INCHES WIDER THAN DIAMETER OF INSERTA TEE.
 2. BREAK AWAY RIGID PIPE SECTION TO BE TAPPED AND EXPOSE NEW LINER SECTION.
 3. BRUSH AND CLEAN PIPE LINER SURFACE AND REMOVE DAMAGED SECTIONS OF RIGID PIPE.
 4. CORE HOLE INTO LINER WITH APPROPRIATE INSERTA TEE HOLE SAW.
 5. INSTALL INSERTA TEE FATBOY® TAP CONNECTION PER PROVIDED INSTALLATION INSTRUCTIONS.
 6. ENCASE CUT OUT SECTION OF RIGID PIPE WITH CONCRETE WHERE REQUIRED BY LINING MANUFACTURER.

©2010
 ADVANCED DRAINAGE SYSTEMS, INC. ("ADS") HAS PREPARED THIS DETAIL BASED ON INFORMATION PROVIDED TO ADS. THIS DRAWING IS INTENDED TO DEPICT THE COMPONENTS AS REQUESTED. ADS HAS NOT PERFORMED ANY ENGINEERING OR DESIGN SERVICES FOR THIS PROJECT, NOR HAS ADS INDEPENDENTLY VERIFIED THE INFORMATION SUPPLIED. THE INSTALLATION DETAILS PROVIDED HEREIN ARE GENERAL RECOMMENDATIONS AND ARE NOT SPECIFIC FOR THIS PROJECT. THE DESIGN ENGINEER SHALL REVIEW THESE DETAILS PRIOR TO CONSTRUCTION. IT IS THE DESIGN ENGINEERS RESPONSIBILITY TO ENSURE THE DETAILS PROVIDED HEREIN MEETS OR EXCEEDS THE APPLICABLE NATIONAL, STATE, OR LOCAL REQUIREMENTS AND TO ENSURE THAT THE DETAILS PROVIDED HEREIN ARE ACCEPTABLE FOR THIS PROJECT.

REV.	DESCRIPTION	BY	MM/DD/YY
			CHK'D
AWM TAPPING LINED RIGID PIPE WITH INSERTA TEE			
		PH: 503/357-2110 FX: 503/359-5417	
DRAWING NUMBER:		Email: sales@insertatee.com	
DATE	DRAWN BY	CHECKED	DATE
11/10/10	NTS	DF	